



TOURATECH

TOURING RALLYE RACING TECHNOLOGY

Dezember 2003

09-044-0210-1

Installation Instructions Locking Oil Cap R1200GS

Contents:

- 1 x Locking oil cap
- 2 x key

Operation:

Remove the original oil cap and set the Touratech locking oil cap in. Turn the oil cap clockwise until it is close.

NOTE: do not open or close the cap just by holding and turning on the key because it may brake! Hold and turn on the oil cap itself.

Turn the oil cap outer ring slightly counter clockwise until it stops. Push the key down and clockwise and the key can be taken out. Now the outer ring will turn free and the cap can't be removed.

Insert the key and turn counter clockwise so that the lock pops up a bit and the cap can be turned open.

