

TOURATECH

TOURING RALLYE RACING TECHNOLOGY

März 2002

01-040-0395-0

Anleitung Verkleidung DESIERTO II R1150 GS

Contains:

- 1 x Fairing DESIERTO II
- 1 x Windshield
- 1 x Dash cover
- 2 x Indicator brackets
- 1 x Miniblinker M12 left
- 1 x Miniblinker M12 right
- 1 x Fairing bracket left
- 1 x Fairing bracket right
- 2 x Screw M12x25 (drilled)
- 1 x Screw domehead M6 x 25
- 4 x Screw domehead M6 x 20
- 1 x Screw domehead M6 x 16
- 2 x Screw domehead M5 x 12
- 4 x Screw domehead M4 x 16
- 4 x Nylox nut M4
- 2 x Washer for M12
- 2 x Plastic washer for M6
- 2 x Plastic washer for M5
- 8 x Washer large for M4
- 2 x Spacer D=5
- 1 x Spacer D=7




NOTE:


Please check for proper fit and parts **BEFORE** painting!

1. Preparation:

Open the front blinker glass, disconnect the wires and remove the complete blinkers. Windshield, dash and head light cover/bracket need to be removed as well.

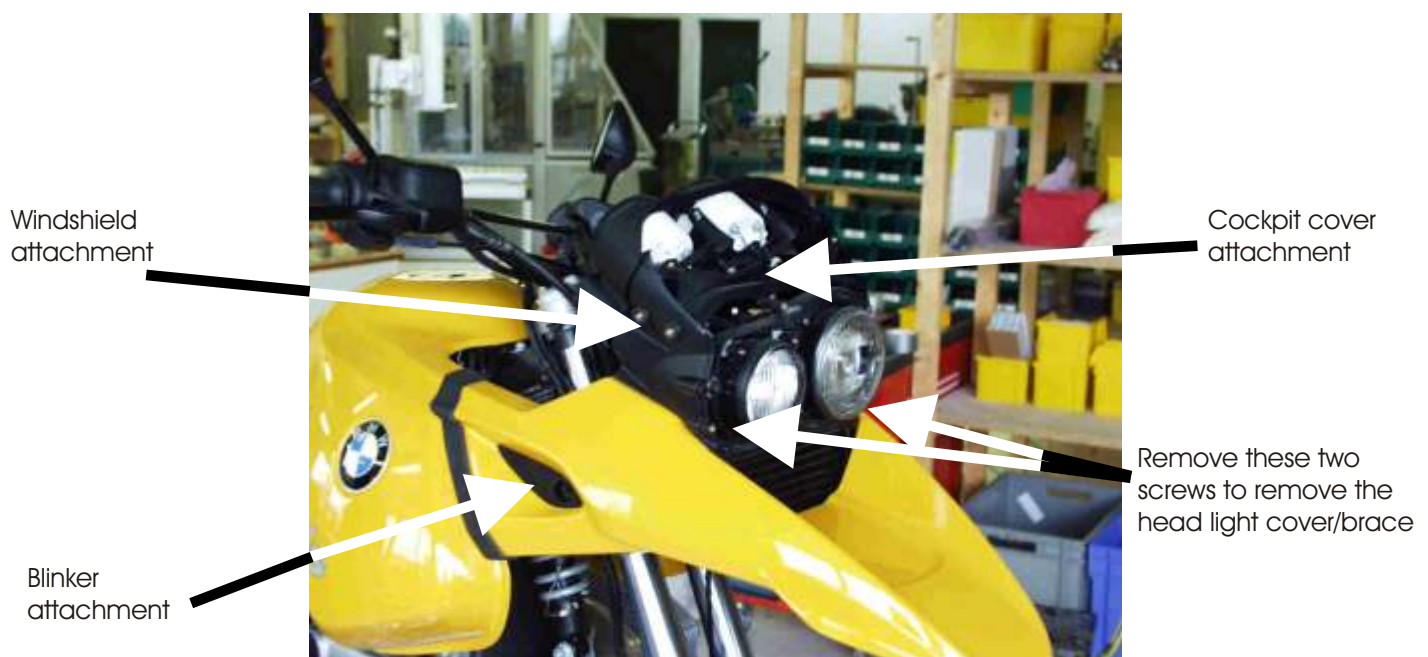

These instructions are at our current level of knowledge. Legal requirements do not exist. Technical issues subject to change.

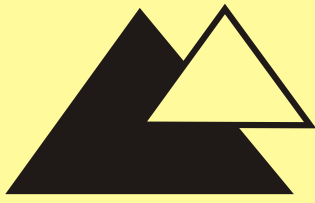


März 2002

01-040-0395-0

Anleitung Verkleidung DESIERTO II R1150 GS


2. Installation of Fairing brackets:

Fit the fairing brackets on left and right side as show in photos with screws and spacers. You can adjust the brackets to make fairing FIT properly

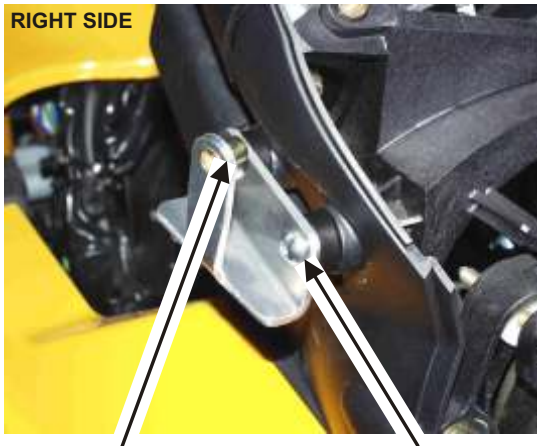

Rear - Screw domehead
M6x20 with 5mm spacer

Front - Screw domehead
M6x25 with 7mm spacer

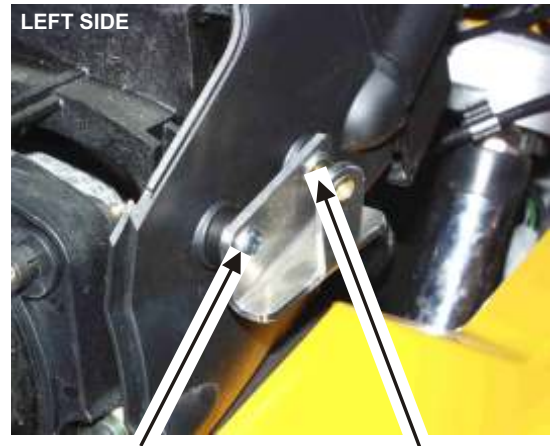


Front - Screw domehead
M6x20 with 5mm spacer

Rear - Screw domehead
M6x16 with no spacer

3. Installation of the dash cover:

Install the new dash cover just like the original screws. See the two screws on the photo.

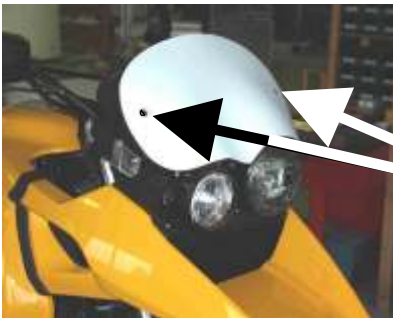

Dash cover is installed at these attachment points.


4. Installation of Blinker Brackets:

Install the new brackets where the originals were removed. Attach them from inside the "beak" with each one M12x25 screw (drilled) and washer M12.

Route the wires back thru the Indicator brackets one after the other. This may require some patience. .

Attach blinker brackets
from inside the beak with one M12x25 screw
(drilled) and washer M12 on left and right side.



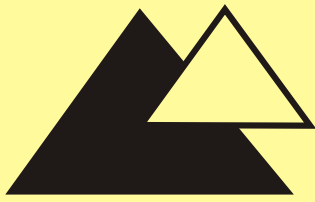

01-040-0395-0

Anleitung Verkleidung DESIERTO II R1150 GS

5. Installation of the Desierto II fairing with windshield:

Install first the windshield on the Desierto II fairing with four domehead screws M4x16, eight washers large M4 and four nyloc nuts M4.

Set the fairing on from front and attach it with the screws M5x12 and plastic washers M5 just finger tight. Next attach the sides with the M6x20 and plastic washers M6 to the side Fairing brackets finger tight.


Open the miniblinkers, remove the reflector and route the wires in. Now attach the blinkers on the indicator brackets and tighten them in correct position.

Attach the blinker wires to the connectors (brown is ground). If the connectors are too large, crimp them with a crimping tool. Set in the reflector, put the ORIGINAL 21W bulbs in and reattach the lenses.

Attachment of windshield on Desierto II Fairing with four domehead screws M4x16, eight washers large M4 and four nyloc nuts M4.

Attach sides with the
M6x20 and plastic
washers
M6 to the side
Fairing brackets

Miniblinkers completed

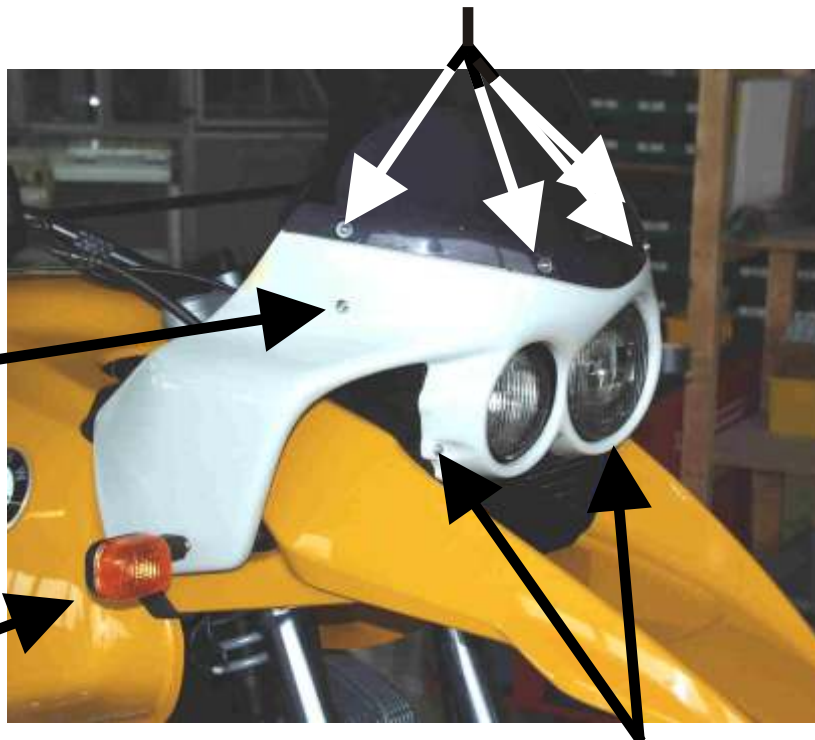

from front and attach it with two screws M5x12
and plastic washers M5

6. NOTE

Check the tightness of all screws regularly and especially after offroad ride.