

TOURATECH

TOURING RALLYE RACING TECHNOLOGY

01-040-052X-1

Installation Instructions Hand guards R850/1100GS

Contains:

- 1 x Right Hand protector
- 1 x Linker Handprotector
- 2 x Underlay washer large
- 2 x Underlay washer small
- 1 x Spacer long
- 1 x Spacer short
- 2 x Screw hex M8x30
- 2 x Screw hex M6x40
- 2 x Screw hex M6x35
- 4 x Nylock nut M6
- 2 x Washer large M6
- 2 x Washer small M6

Installation:

Handlebar clamps:

Bend the handlebar clamps open and set them on the handlebars. Opening towards front and thread towards ground if clamp has it. Clamps are easy to bend open with two screw drivers.

Bar end weights:

Remove the screws holding bar end weights.

Right side hand protector:


Press the small and large underlay washers in the hand protectors. Set the long Y-looking spacer on the clamp (single end on the handlebar clamp) and attach with M6x35 screw and small washer M6. Attach now the twin end of the spacer on the hand protector with screw M6x40, washer M6 and nylock nut M6. Attach the other end of the hand protector on the handlebar end with M8x30 screw.

Left side hand protector:

Installation of the left side is same as right side. Using the short spacer between handlebar clamp and hand protector.


Spoiler (optional):

Set the small lip in the hole on the hand guard and attach with the M4x14 screws, washers, nuts and plastic spacers as shown on photo.

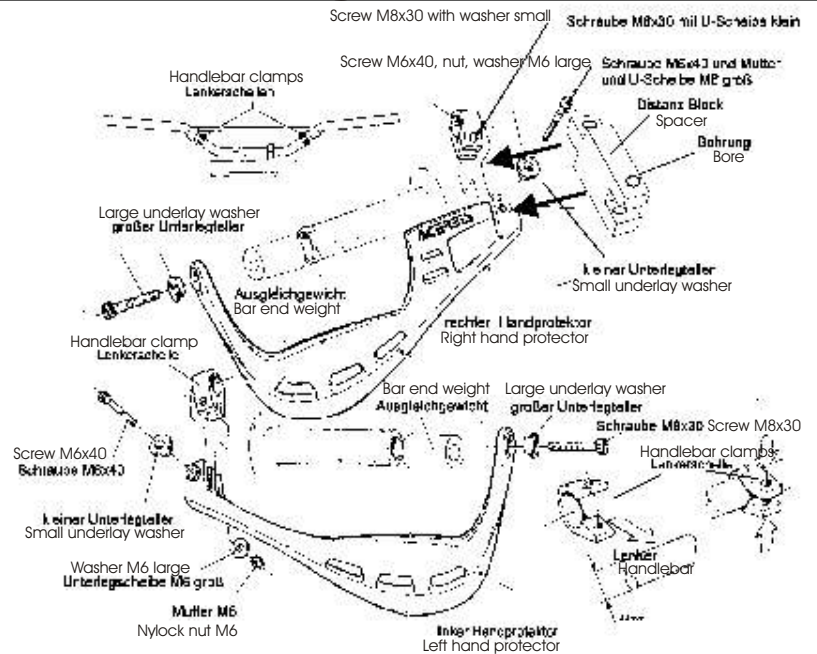

More relating installation tips and photos at:

http://www.touratech-usa.com/instl/instl_040-054x.html

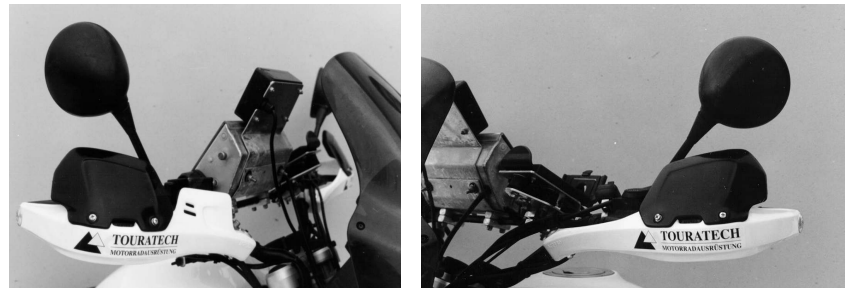

NOTE:

These are universal hand protectors and not specially designed for the R850/1100GS model.

Sometimes hand guards need to be lightly bend in place to fit with model specific Touratech hardware and usually there are additional parts left over after installation is completed.

